



LOOKING INTO ECU

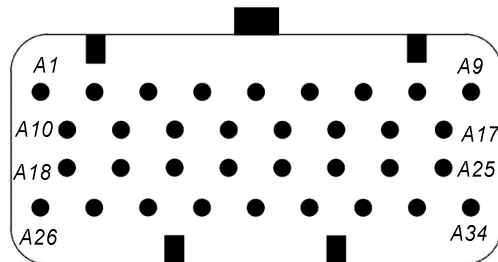

CONNECTOR A

LOOKING INTO ECU

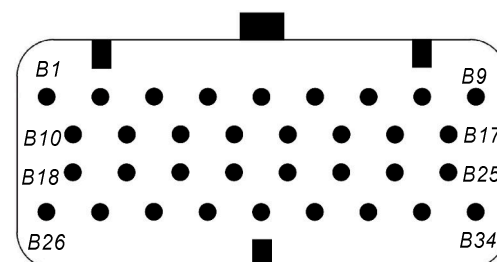

CONNECTOR B

NOTE: The **Sensor 0V Ref** pin is a specialised ground output for all analog sensors. Connect direct to the sensor 0V pin. **DO NOT** connect to the Engine Block or ECU Ground.